



Axis 10

Laser Point Wheel Alignment

Inclinometer

Within a few seconds the electronic inclinometer can measure the different angles of the vehicle's geometry. Camber is immediately shown after installation. Move the steering wheel to 20 degrees each to the left and to the right. Then caster and inclination are shown on the display. The steering lock necessary for the measurement is also confirmed by a LED signal.



Optional accessories

ProClamp softline feet
for rim >22" (3 pieces)

Part No. 912 008 087

4 Support Rams incl.

2 floating plate and

4 spacing strip

Part No. 921 001 004

